















Model DRC300Z Parts List

Item#	Part#	Description	Q'ty
001	141A46-4	DUST BOX COMPLETE	1
	C10 422690-3	SEAL RING	1
002	191P31-7	FILTER H COMPLETE SET	1
003	413500-5	UPPER TANK	1
004	191P22-8	MAIN BRUSH COMPLETE SET	1
	C10 413581-9	METAL HOLDER	1
005	191P24-4	BOTTOM PLATE ASSEMBLY SET	1
	D10	INC. 6-9,30,31	
006	136530-6	BRUSH C ASSEMBLY	1
007	413585-1	BOTTOM ROLLER 11	2
008	266429-2	TAPPING SCREW 3X16	2
009	413586-9	BOTTOM CAP	1
010	266326-2	TAPPING SCREW 4X18	10
011	1910L6-4	CLIFF SENSOR ASSY REPAIR SET	5
012	266326-2	TAPPING SCREW 4X18	2
013	141B82-6	TERMINAL COVER R COMPLETE	1
	C10 263005-3	RUBBER PIN 6	2
014	811U06-7	DRC300 SERIAL NO. LABEL	1
015	643523-1	TERMINAL	1
016	266326-2	TAPPING SCREW 4X18	2
017	413478-2	TERMINAL BASE	1
018	688234-1	FERRITE CORE	2
019	413554-2	PACKING A	1
020	141B81-8	TERMINAL COVER L COMPLETE	1
	C10 263005-3	RUBBER PIN 6	2
021	413555-0	FILTER SENSOR HOLDER	1
022	643523-1	TERMINAL	1
023	1910J8-6	PHOTO INTERRUPTER REPAIR SET	1
024	413478-2	TERMINAL BASE	1
025	141J98-9	LOWER HOUSING COMPLETE	1
	C10 422530-5	SPONGE SHEET	2
026	266147-2	TAPPING SCREW 4X55	8
030	232690-3	COMPRESSION SPRING 7	2
031	413583-5	BOTTOM PLATE	1
034	253084-9	FLAT WASHER 12	1
035	232685-6	COMPRESSION SPRING 18	1
036	413552-6	FRONT ROLLER 18	1
037	256989-2	PIN 4	1
038	413553-4	FRONT CASTER	1
039	251599-0	TAPPING SCREW 4X18	1
040	961018-5	STOP RING E-5	2
041	261167-1	POLYACETAL WASHER 22	2
042	413551-8	REAR ROLLER 28	2
043	413550-0	REAR CASTER	2
044	256988-4	COLLAR HD. PIN 7	2
045	251599-0	TAPPING SCREW 4X18	2
046	263046-9	TAPPING SCREW 3X14	4
047	1910J8-6	PHOTO INTERRUPTER REPAIR SET	2
048	1910J9-4	RF MODULE REPAIR SET	1
049	413561-5	RF HOLDER	1
050	1910K0-9	CONTROL BOARD REPAIR SET	1

051	413560-7	BUMPER ARM	2
052	232700-6	COMPRESSION SPRING 8	2
053	266326-2	TAPPING SCREW 4X18	2
054	232687-2	LEAF SPRING	1
055	413418-0	CONTROLLER HOLDER	1
056	688234-1	FERRITE CORE	2
057	1910K1-7	HALL SENSOR BOARD REPAIR SET	2
060	232686-4	TENSION SPRING 11	1
061	266326-2	TAPPING SCREW 4X18	4
062	1910L3-0	WHEEL R ASSEMBLY REPAIR SET	1
	C10 638A06-0	LEAD UNIT G	1
064	266326-2	TAPPING SCREW 4X18	4
065	1910L2-2	WHEEL L ASSEMBLY REPAIR SET	1
	C10 638A06-0	LEAD UNIT G	1
066	232686-4	TENSION SPRING 11	1
067	632S56-5	THERMAL PROTECTOR UNIT	1
068	266326-2	TAPPING SCREW 4X18	2
069	1910L1-4	MAIN BRUSH MOTOR A, REPAIR SET	1
	C10 413536-4	JOINT	1
	C20 911029-0	P.H.SCREW M3X16 WITH WG	1
070	632S55-7	THERMAL PROTECTOR UNIT	1
071	266326-2	TAPPING SCREW 4X18	3
072	632S55-7	THERMAL PROTECTOR UNIT	1
073	1910L5-6	SIDE BRUSH R MOTOR REPAIR SET	1
074	266326-2	TAPPING SCREW 4X18	3
075	1910L4-8	SIDE BRUSH L MOTOR REPAIR SET	1
076	266326-2	TAPPING SCREW 4X18	2
077	413559-2	AIR DUCT COVER	1
078-1	266130-9	TAPPING SCREW BIND PT 3X16	4
079	422698-7	EXHAUST FILTER	1
080	413557-6	AIR DUCT HOUSING	1
081	422697-9	SPONGE SHEET 24-110	1
082	413558-4	PACKING B	1
083	413535-6	FAN COVER	1
084	422696-1	RUBBER RING	1
085	1910L0-6	FAN MOTOR ASSEMBLY REPAIR SET	1
086	1910K3-3	USS SUB BOARD REPAIR SET	1
087	413482-1	USS COVER R	1
088	1910K3-3	USS SUB BOARD REPAIR SET	1
089-1	266130-9	TAPPING SCREW BIND PT 3X16	2
090	413572-0	BUMPER CAP	1
091-1	266130-9	TAPPING SCREW BIND PT 3X16	4
092	413480-5	USS COVER C	1
093-1	266130-9	TAPPING SCREW BIND PT 3X16	2
094	1910K3-3	USS SUB BOARD REPAIR SET	1
095	413481-3	USS COVER L	1
096	1910K2-5	USS MAIN BOARD REPAIR SET	1
097	1910K3-3	USS SUB BOARD REPAIR SET	1
098	1910K3-3	USS SUB BOARD REPAIR SET	1
099	1910K3-3	USS SUB BOARD REPAIR SET	1
100	413579-6	BUMPER COVER R	1
101-1	266130-9	TAPPING SCREW BIND PT 3X16	2
102	413427-9	BUMPER	1
103	413575-4	BUMPER COVER C	1
104	413578-8	BUMPER COVER L	1
105-1	266130-9	TAPPING SCREW BIND PT 3X16	3

106-1	266130-9	TAPPING SCREW BIND PT 3X16	2
110	422820-6	RUBBER CAP	1
111	127838-9	TOP COVER ASSEMBLY	1
	D10	INC. 112	
112	413570-4	SWITCH BUTTON	1
113	232689-8	TORSION SPRING 14	2
114	312B42-7	TOP COVER SHAFT	2
115	1910K4-1	UI BOARD REPAIR SET	1
116	1910K7-5	USB IF BOARD REPAIR SET	1
117	141B97-3	TOP CAP COMPLETE	1
	C10	8032K4-8	INDICATION LABEL
118-1	266130-9	TAPPING SCREW BIND PT 3X16	6
119	413543-7	USB COVER	1
120	266326-2	TAPPING SCREW 4X18	2
121	413537-2	INNER FRONT COVER	1
122	266326-2	TAPPING SCREW 4X18	2
123	266326-2	TAPPING SCREW 4X18	6
124	1910K9-1	BUZZER REPAIR SET	1
125	811U01-7	DRC300 NAME PLATE	1
126-1	141E51-5	UPPER HOUSING COMPLETE	1
	C10	263005-3	RUBBER PIN 6
	C20	8035V7-7	CAUTION LABEL
	C30	8035V8-5	CAUTION LABEL
	C40	8039F9-5	CAUTION LABEL
	C50	8058J9-3	CAUTION LABEL
	C60	8058K0-8	CAUTION LABEL
127	413568-1	BUTTON	1
128	422701-4	PROTECTOR	1
129	231297-2	COMPRESSION SPRING 9	2
130	413540-3	FILTER BUTTON	1
131	232688-0	COMPRESSION SPRING 6	1
132	141B90-7	LIDAR COVER COMPLETE	1
	C10	8032J8-3	INDICATION LABEL
133	413541-1	SPRING HOLDER	1
134	266326-2	TAPPING SCREW 4X18	1
135	620B66-2	LIDAR MODULE	1
136	413567-3	LIDAR HOLDER	1
137	413547-9	LED LENS R	1
138	266326-2	TAPPING SCREW 4X18	6
139	422703-0	SEAL RING S	1
140	422703-0	SEAL RING S	1
141	911029-0	P.H.SCREW M3X16 WITH WG	4
142	413548-7	LED REFLECTOR R	1
143	1910K5-9	LED BOARD REPAIR SET	1
144	413544-5	LED LENS L	1
145	413549-5	LED COVER R	1
146	266326-2	TAPPING SCREW 4X18	2
147	413545-3	LED REFLECTOR L	1
148	413546-1	LED COVER L	1
149	1910K5-9	LED BOARD REPAIR SET	1
150	266326-2	TAPPING SCREW 4X18	2
151	413562-3	HANDLE	1
154	413422-9	HANDLE COVER	1
155	413542-9	VISION CAMERA LENS	1
156	422700-6	SEAL RING T	1
157-2	1911A5-5	VISION CAMERA COMP REPAIR SET	1

158	266326-2	TAPPING SCREW 4X18	6
160	413565-7	HANDLE LOWER COVER	1
161	266326-2	TAPPING SCREW 4X18	4
162	421468-1	CORD SEAL	1
163	649152-8	EARTH LINE 70	1
A01	191P28-6	SIDE BRUSH ASSEMBLY SET	1
A02	620B53-1	RF REMOTE CONTROLLER	1
	C10 NC00000012	BATTERY COVER	1
E01	136571-2	EARTH LINE LEAD UNIT A ASS'Y	1
	D10	INC. 162,163	
E02	638A01-0	LEAD UNIT B	1
E03	638A02-8	LEAD UNIT C	1
E04	638A03-6	LEAD UNIT D	2
E05	638A04-4	LEAD UNIT E	1
E06	638A05-2	LEAD UNIT F	2
E08	638A07-8	LEAD UNIT H	1
E09	638A08-6	LEAD UNIT I	1
E10	638A09-4	LEAD UNIT J	2
E11	638A10-9	LEAD UNIT K	1
E12	638A11-7	LEAD UNIT L	1
E13	638A12-5	LEAD UNIT M	1
E14	638A13-3	LEAD UNIT N	1
E15	638A14-1	LEAD UNIT O	1